

# WashStand Xtra user instructions

## Getting started

Your WashStand Xtra provides a fresh water hand wash without external plumbing or drainage.

It is entirely self contained, with the TEALtainer (water container) holding 9 litres of fresh water.

The waste water is contained within a heavy duty polyethylene bag - when the fresh water is used up, the waste bag will be full.

The WashStand Xtra provides up to 50 ten second washes per filling of the TEALtainer.

**Please note:-** The WashStand Xtra has nothing to adjust.

The water flow is activated by depressing the foot pump at the base.

## Unpacking

Check that the component parts and specification are correct. Check for damage and retain packaging.

*Notify Teal immediately if damage is found.*

## Setup

Pull out the fresh water pipe (white cap) and waste water pipe (red cap). Remove the TEALtainer. Fill the fresh water bag from the cold tap to just below the filler cap.

Return the TEALtainer to the side of the WashStand Xtra and reconnect the fresh water delivery pipe, **making sure that the waste pipe is inserted into the red waste cap hole.**

Position the WashStand Xtra on any flat, level surface, wherever hand

washing will be needed.

The WashStand Xtra is now ready for use.


## Operation

To operate, place hands in the bowl by the tap and press the foot pump at the base in order to begin the flow of water. When hands are wet, apply liquid soap and clean hands thoroughly for approximately 20 seconds. When ready, activate the foot pump to wash the soap from your hands.

Dry hands with a disposable paper towel.

## Manual purge

To undertake a cold water purge, press the foot pump several times to initiate the flow of water.

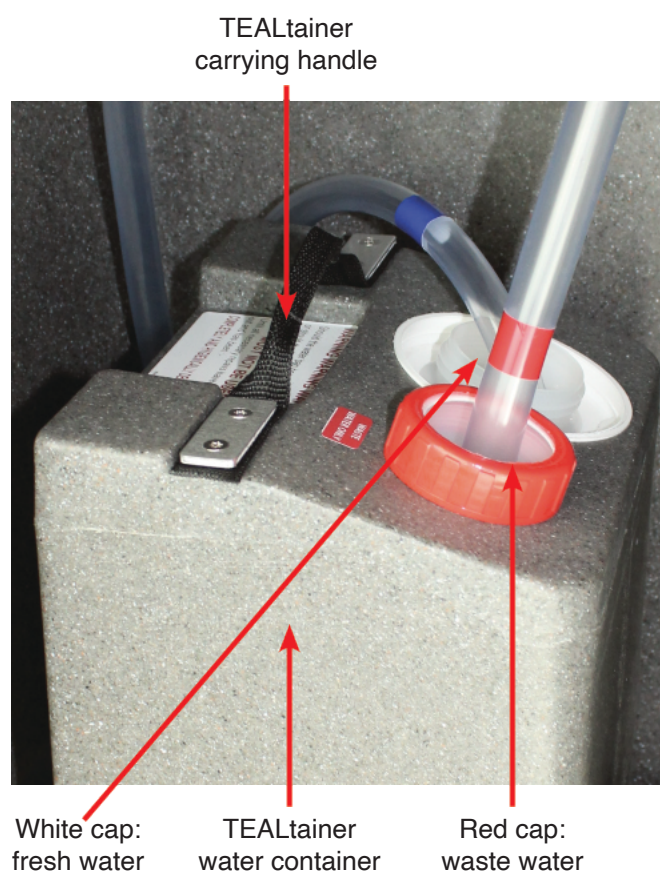

 **Teal support Monday-Friday 8-5 (Fri 1pm)**  
**Helpline 0121 770 0593**  
 Teal Patents Ltd, Unit 2 Waterloo Avenue  
 Chelmsley Wood Industrial Estate  
 Birmingham B37 6QQ  
 Tel: +44(0) 121 770 0593  
 Email: enquiries@tealwash.com  
 www.tealwash.com

## IMPORTANT safety instructions - read first

Do use only as a hand wash - DO NOT DRINK the water.

Do only use cold fresh water to fill your TEALtainer.

Do **TAKE CARE** when handling the TEALtainer - when full it weighs 11KG. If you suffer from a medical condition that could be adversely affected, **GET ASSISTANCE.**

Do dispose of all waste water into a sluice or foul-water drain

Do disinfect the unit regularly - see cleaning procedure.

Do **not** use the unit if it is damaged - contact Teal.


Do **not** use the WashStand Xtra for the disposal of any other fluids or waste liquids.

Do **not** throw away packaging - retain for storage.

Do **not** store your unit in freezing conditions.



Do not drink

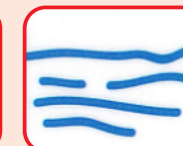

Do not operate without water



Do not freeze

## Maintenance and troubleshooting

### Problem: The unit will not work.

1. Check that the TEALtainer fresh water container (white cap) contains sufficient water and that the fresh water pipe reaches the bottom of the container.
2. Ensure that the waste water pipe is positioned correctly in the waste water inlet of the TEALtainer (red cap).

### Problem: The unit seems to be working but there is a reduced/no water flow?

1. Turn the unit in order to access the TEALtainer (water container) on the left side.
2. Pull out the fresh water pipe (white cap) and waste water pipe (red cap). Remove the TEALtainer.

2. If the waste bag is fully inflated, empty it into a sluice or foul water drain. Withdraw the fresh water pickup pipe and check the filter for obstructions. New bags and filters are available from Teal.

3. Ensure that the fresh water compartment is filled with cold fresh water to just below the white cap. Take care when handling the full container. Locate the TEALtainer into the WashStand Xtra.

4. Replace the fresh water pipe (white cap) and waste water pipe (red cap). Press the foot pump several times to initiate a cold water purge.

5. If water still does not flow, check the tap nozzle for blockages. Clean with a pin or carefully lever out and contact Teal for a replacement.

**If a problem persists, contact the Teal hotline on +44 (0)121 770 0593.**

## Daily cleaning

1. Remove the TEALtainer (water container) from the WashStand Xtra.
2. Drain the TEALtainer completely and dispose of all water to a sluice or foul water drain.
3. Flush out the waste compartment (red cap) with fresh water. Make sure that the waste bag is empty.
4. Re-fill the fresh water compartment (white cap).
5. Wipe all surfaces with a soft cloth using a mild detergent.
6. Replace the TEALtainer and initiate a cold water purge by pushing the foot pump repeatedly for 20 seconds.

## Disinfection

It is recommended that your WashStand Xtra is disinfected every 48 hours. Fill the fresh water compartment, add **500ppm chlorate solution**. Repeatedly press the foot pump in order to flush the solution through the system.

Dispose of all the water and then flush through again with clean water.

## Storage

Before placing in storage:-

- Press the foot pump until the water flow stops.
- Empty the TEALtainer completely, clean and wipe down.
- Ensure that the unit is protected from frost.

## Warranty

TEAL PATENTS LTD warrants that under normal use and correct maintenance, it will replace at no cost to the customer any defect in material or workmanship for a period of 2 years from the date of purchase on a return to factory basis.

Exclusions: Normal use must follow the guidelines given. Repairs required as a result of incorrect

maintenance, accidental damage or use outside of the recommended parameters. Repairs required as a result of non-approved third parties maintaining the product, or any unapproved modifications.

See our terms and conditions available on request.

This does not affect your statutory rights.