

The KiddiSynk Installation and operating instructions



Manufactured by:

Teal Patents Limited

Unit 2

Chelmsley Wood Industrial Estate

Waterloo Avenue

Chelmsley Wood

Birmingham B37 6QQ

Telephone: 0121 770 0593

Email: enquiries@tealwash.com

www.tealwash.com





The KiddiSynk Installation and operating instructions

Index

Important safety instructions	page 4
Box contents	page 5
Parts identification	page 6
Installation	page 8
Operating instructions	page 9
Cleaning instructions	page 10
Troubleshooting guide	page 10
Guarantee	page 11
Technical specification	page 12

Page 2

IMPORTANT SAFETY INSTRUCTIONS









Before using this appliance, read all instructions and familiarise yourself with the operation of the unit

- 1. The KiddiSynk can be used by children of all ages. It is however, important that children are taught how to use it properly.
- 2. Supervise children when washing to make sure that they wash their hands effectively.
- 3. Cleaning and user maintenance should not be made by children without supervision.
- 4. The unit should only be used in accordance with these instructions. Do not carry out any maintenance other than is shown in these instructions or as advised by Teal Patents service support.
- 5. Do not place in a hot area of more than 70°C.
- 6. Water dispensed is not suitable for drinking.
- 7. Unit must only be used on a flat, even surface. It must be used only in an upright position. An adult should position the unit and fill it with clean water before allowing a child to use the unit.
- 8. Unit should be positioned where it does not obstruct walkways or access to services.
- 9. Unit must only be filled with clean water of the required temperature, which should not exceed 40°C.
- 10. Do not overfill: only fill to the water level indicated on the *parts identification* photograph on page 7.
- 11. If the appliance is not working as it should, has been dropped or damaged, do not use. Contact the seller or Teal Patents Ltd.
- 12. This equipment is for preheated water for handwashing only. It is not designed for washing of crockery or other items.

- 13. The unit will not operate without water.
- 14. Waste water is removed by taking out the white waste water bottle.
- 15. Waste water should be disposed of to a foul drain.
- 16. This unit must not be subjected to a high pressure water jet.
- 17. Any spillages should be cleaned up as soon as possible to avoid slipping hazards.
- 18. Keep unit away from direct heat sources.
- 19. Do not alter the unit in any way this will invalidate the warranty and may make it unsafe to operate.

Box contents

Before installing the unit check that all parts are present and undamaged.

In the event of any shortages or damaged items contact the retailer.

Do not attempt to use substitute parts except as stated in these instructions.

Contents consist of:

• 1 KiddiSynk unit.

Page 4 Page 5





Page 6 Page 7

Installation

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY INVALIDATE YOUR WARRANTY.

Free Standing

This unit has been designed to be used only in an upright position on a firm, flat level surface.

The unit can safely be used both indoors and outdoors.

Failure to follow these instructions may result in personal injury, damage to the product or damage to property.

Ensure that the position of the unit allows sufficient space for the lifting on and off of the clean water tank (top) and the removal of the waste water container (right hand side).

Remove the red filler cap to add clean, fresh water. Replace the cap when the unit has been filled to the correct level.

Do not over-tighten fixings as this may damage the unit.

Check that the unit is upright and level before filling.

Waste Water

All KiddiSynk models come complete with a removable waste water container that retains all the dirty water.

There is no need for a separate waste pipe or waste water storage container.

Operating instructions

The unit can be filled with the clean water tank in place on top of the unit if required.

The clean water tank can also be lifted from the unit to be carried to a water source such as an outside tap. Hold the handles of the clean water tank firmly in order to lift it away from the unit.

Ensure that the location pegs on the base unit are slotted accurately into place in the water tank location holes when repositioning the clean water tank. See the relevant *parts identification* photograph on page 7.

Remove the filler cap at the top of the unit and add clean, fresh water.

Unit must only be filled with clean water of the required temperature, which should not exceed 40°C.

Do not overfill - only fill to the water fill line indicated on the relevant *parts identification* photograph on page 7.

Replace the filler cap.

Ensure that the white waste water container inlet has been pushed into place beneath the waste water pipe - see the relevant *parts identification* photograph on page 7.

Use the tap to discharge water to wash hands.

If a continuous flow of water is required, fully depress the tap lever.

Waste water will drain into the waste water container.

To remove waste water, remove the water container and lift it out.

Tip the water from the water container into a foul water drain.

Rinse with clean water.

Refill the unit and with clean water of the required temperature, which should not exceed 40°C.

Cleaning instructions

Empty the waste water container to a foul water drain and rinse with clean water.

If unit is left unused for an extended period it is recommended that it is emptied of water and replenished with fresh water.

Clean all surfaces with an anti-bacterial wipe or disinfectant paying particular attention to frequent contact points. Do not use abrasive cleaners which may scratch the external surfaces.

This unit must not be subjected to a high pressure water jet.

The unit should be disinfected weekly using a hypochlorite solution such as Milton Sterilising Fluid at a concentration of **500ppm for 5 minutes** and then flushed through with fresh water.

Troubleshooting guide

No water dispensed. Check water level in tank

Water cold. Refill the unit with clean water of the required temperature, which should not exceed 40°C.

Water around unit. Clean up any spillage from filling unit.

Check that the waste water container is not full.

If further water is seen, stop using the unit and contact the supplier for advice.

Optional extras

Towel holder ref GENTWLHDR

Soap bottle and bracket ref GENSOAPDISP/BRKT

Guarantee

All Teal Patents products are tested before leaving the factory.

The unit is covered by a two year return to manufacturer warranty from date of purchase – please ensure that you retain proof of purchase.

Any faulty items will be repaired or replaced, and the repairs guaranteed for the remainder of the original warranty period.

Exclusions

Teal Patents will not be liable to repair or replace goods where:

- The fault has been caused through misuse, accidental damage, use contrary to the manufacturers instructions or damage in transit
- Repairs have been attempted by someone other than Teal Patents or an authorised dealer
- The appliance is second hand
- The warranty does not cover any claims for consequential loss or damage.

This guarantee does not affect your statutory rights as a consumer.



The KiddiSynk

Technical specification

Product Specification:

Height 980mm
Height to bowl 650mm
Width 370mm
Depth 475mm
Water capacity 8 litres



Teal Patents Ltd

Unit 2, Chelmsley Wood Industrial Estate Waterloo Avenue, Chelmsley Wood Birmingham B37 6QQ, UK Tel: +44 (0) 121 770 0593

www.tealwash.com

Email: enquiries@tealwash.com