

PROWASH user manual

Getting started

Your ProWash provides a hot water hand wash without external plumbing or drainage. It is entirely self contained, with the TEALTainer II holding 10 litres of fresh water. The waste water is contained within a heavy duty polyethylene bag - when the fresh is used up the waste bag will be full. The ProWash provides up to 50 ten second washes per filling of the TEALTainer II.

Please note:- The ProWash has nothing to adjust. Both the water temperature (approx. 42°C) and the 10 second wash are factory set.

Unpacking

Check that the component parts and specification are correct. Check for damage and retain packaging. Notify Teal immediately if damage is found.

Setup


Disconnect the water delivery pipe from the blue ringed connector and remove TEALTainer II. Fill with

cold water though the large opening up to the side indentation. Place the TEALTainer II into the unit and feed the waste pipe back into the red waste cap hole and connect up the water delivery pipe.

Connect the 13 amp plug into the 230V mains socket and switch the unit on by means of the ON/OFF switch located on the underside of the power box behind the door. The Greensensor will light up and the unit will run a 10 second cold water purge. The ProWash is now ready for use.

Operation

To operate, place your hands in the bowl by the sensor and the Greensensor will start to flash, indicating that the water is being heated. After 3-5 seconds, the Greensensor will extinguish and the hot water spray will run for 10 seconds. To reset, remove the hands from the bowl and the Greensensor will light up indicating that your ProWash is ready for further use.

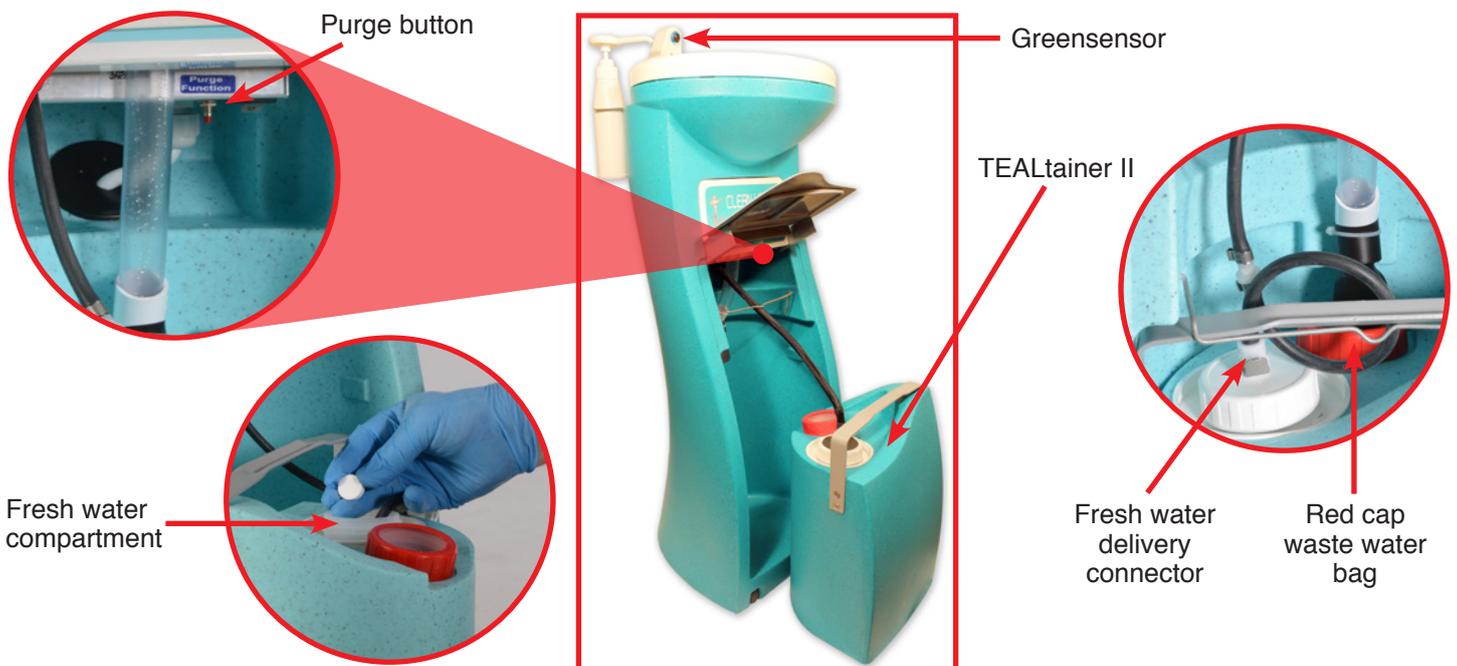

Daily cleaning

1. Switch off the unit.
2. Drain the TEALTainer II completely and dispose of all water to a sluice or foul water drain.
3. Flush out the waste compartment (red cap) with fresh water.
4. Re-fill the fresh water compartment (white cap).
5. Wipe all surfaces with a soft cloth using a mild detergent.
6. Switch on and the unit will automatically run a 10 second cold water purge.

Disinfection

It is recommended that your ProWash is disinfected

every 48 hours. Fill the fresh water compartment, add **500ppm chlorate solution** and switch on. After the automatic 10 second purge, press the purge button. The unit will run for 5 minutes effectively disinfecting the complete system. Dispose of all the water and then flush through with clean water.

Storage

Before placing in storage:-

- Operate the purge button until water flow stops.
- Empty the TEALTainer II completely, clean and wipe down.
- Ensure that the unit is protected from frost.

PROWASH user manual

Important safety instructions - read first

Do use only as a hand wash - DO NOT DRINK the water.

Do use an electrical supply matching the product rating.

Do get your ProWash electrically tested annually by a qualified electrician.

Do unplug before removing the TEALTainer II.

Do only use cold fresh water to fill your TEALTainer II.

Do **TAKE CARE** when handling the TEALTainer II - when full it weighs 11KG. If you suffer from a medical condition that could be adversely effected, **GET ASSISTANCE**.

Do dispose of all waste water into a sluice or foul-water drain

Do disinfect the unit regularly - see cleaning procedure.

Do **not** use the unit if it is damaged - contact Teal.

Do **not** create a trip hazard with the mains cable.

Do **not** use if the mains cable is damaged - contact TEAL.

Do **not** use the ProWash for the disposal of any other fluids or waste liquids.

Do **not** throw away packaging - retain for storage.

Do **not** store your unit in freezing conditions.




**TEAL support Monday-Friday 8-5 (Fri 1pm)
Helpline 0121 770 0593**

TEAL Patents Ltd, Unit 2 Waterloo Avenue
Chelmsley Wood Industrial Estate, Birmingham B37 6QQ
Tel: +44(0) 121 770 0593. Fax: +44(0) 121 770 0385
Email: enquiries@tealwash.com www.tealwash.com



Do not drink

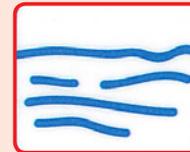

**Do not operate
without water**



Do not freeze

Maintenance and troubleshooting

Problem: The unit will not work and there is no illuminated green tap ring.

1. Check that the appliance is plugged into and switched on to a mains supply that corresponds to the rating plate at the rear of the unit.
2. Check that the unit itself is switched on. Open the door and locate the on/off switch on the underside of the power box. The green tap indicator will illuminate and the automatic purge will start.
3. Check the fuse in the plug (use only a 13 Amp fuse to BS1362). For US models, check the fuse located next to the on/off switch.

Problem: The unit seems to be working but there is a reduced/no water flow?

1. Open the door and **switch off the unit**, unclip and remove the TEALTainer II. Disconnect the pickup

pipe by pushing the grey tab whilst pulling upwards.

2. If the waste bag is fully inflated, empty it into a sluice or foul water drain. Withdraw the fresh water pickup pipe and check the filter for obstructions. New bags and filters are available from Teal.
3. Ensure that the fresh water compartment is filled with cold fresh water to the side indentation. Take care when handling the full container. Locate the TEALTainer II into the unit.
4. Ensure that the pickup pipe connector snaps on to the white spout. Switch on the unit: it will perform a 10 second cold water purge to prime the system.
5. If water still does not flow, check the tap nozzle for blockages. Clean with a pin or carefully lever out and contact Teal for a replacement.

Warranty

TEAL PATENTS LTD warrants that under normal use and correct maintenance, it will replace at no cost to the customer any defect in material or workmanship for a period of 2 years from the date of purchase on a return to factory basis.

Exclusions: Normal use must follow the guidelines given. Repairs required as a result of incorrect maintenance, accidental damage or

use outside of the recommended parameters. Repairs required as a result of non-approved third parties maintaining the product, or any unapproved modifications. Repairs required to any unit which has been parties by a purchaser. See our terms and conditions available on request.

This does not effect your statutory rights.

**Important: always unplug your handwash before inspecting it.
If a problem persists, contact the Teal hotline on +44 (0)121 770 0593.**